

RCS Fitting



Part # **7008**
1 3/4 Straight Hose



Part # **7009**
1 1/2 Straight Hose



Part # **7010**
1 1/4 Straight Hose



Part # **7011**
Two Gear Clamps 1 1/2



Part # **7008-90**
1 3/4 90° Hose



Part # **7009-90**
1 1/2 90° Hose



Part # **7010-90**
1 1/4 90° Hose



Part # **7012**
1/2" and 3/8" Clear
Hose Adapter

6072-1

Part# **7015C**



Part # **7013** (1 per RCS 540)
5 Step Loop Hose



Part # **7014** (2 per RCS 530 E)
5 Step with Male
Quick Connect



Part # **7015**
12" long 3/8" Clear
Hoses
and One Rubber Cone
Adapter



Part# **7106**
3/8" Hose Adapter



Part# **7107**
5/16" Hose Adapter

Optional Fittings



Part# **7977-A**
Quick disconnect for Ford Diesel



Part# **7977-B**
Quick disconnect for Ford Diesel



Part **7977-C** as set
Quick disconnect for Ford Diesel



Part# **7977-D**
Hanger for Ford Diesel



Part# **7976-A**
Quick disconnect for Audi/Volks



Part# **7976-B**
Quick disconnect for Audi/Volks



Part **7976-C** as set
Quick disconnect for Audi/Volks



Part# **7976-D**
Hanger for Audi/Volks



Part# **7975-A**
Quick disconnect for BMW



Part# **7975-B**
Quick disconnect for BMW



Part# **7975-C** as set
Quick disconnect for BMW



Part# **7975-D**
Hanger for BMW


All Quick Disconnects come with Part# **7010 ¼ straight hose



Part# **RC-043**
Radiator Cap
Adapters



Part# **RC-050**
Radiator Cap
Adapters

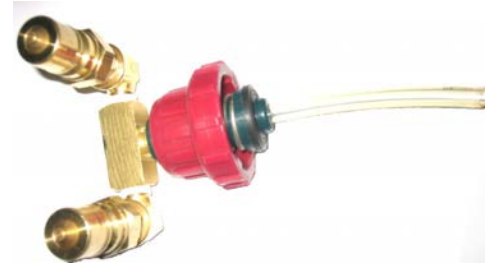

Part# **RC-041**
Radiator Cap
Adapters

Hoses



Part# **7016-2**
1/2" Green Hose



Part# **7016-1**
1/2" Red Hose



Part# **7016**
1/4" Black Hose

RCS Coolant Machine Adapters

Part #7106, 7107

The idea is to back flush with the engine off. With these adapters you do not have to remove the upper hose and there is less chance of getting air in the system. You can flush with the engine running, just switch the hoses.

Note: On some Fords where the hose split in two different directions you may have to pinch one hose off. Check with a Senior Technician before doing this. Some knowledge of the flow direction may be needed on some models.



Fitting A

Fitting B

Part #7106 3/8"



Fitting A

Fitting B

Part #7107 5/16"

Insert Fitting A barb fitting into hose and clamp
Insert Fitting B open end hose on bottle and clamp

Remove
Hose

VW



Remove Hose



GM

Insert Fitting A
into hose.
Insert Fitting B
onto bottle



Insert Fitting A into hose
Insert Fitting B onto bottle

Remove Hose



Ford

